


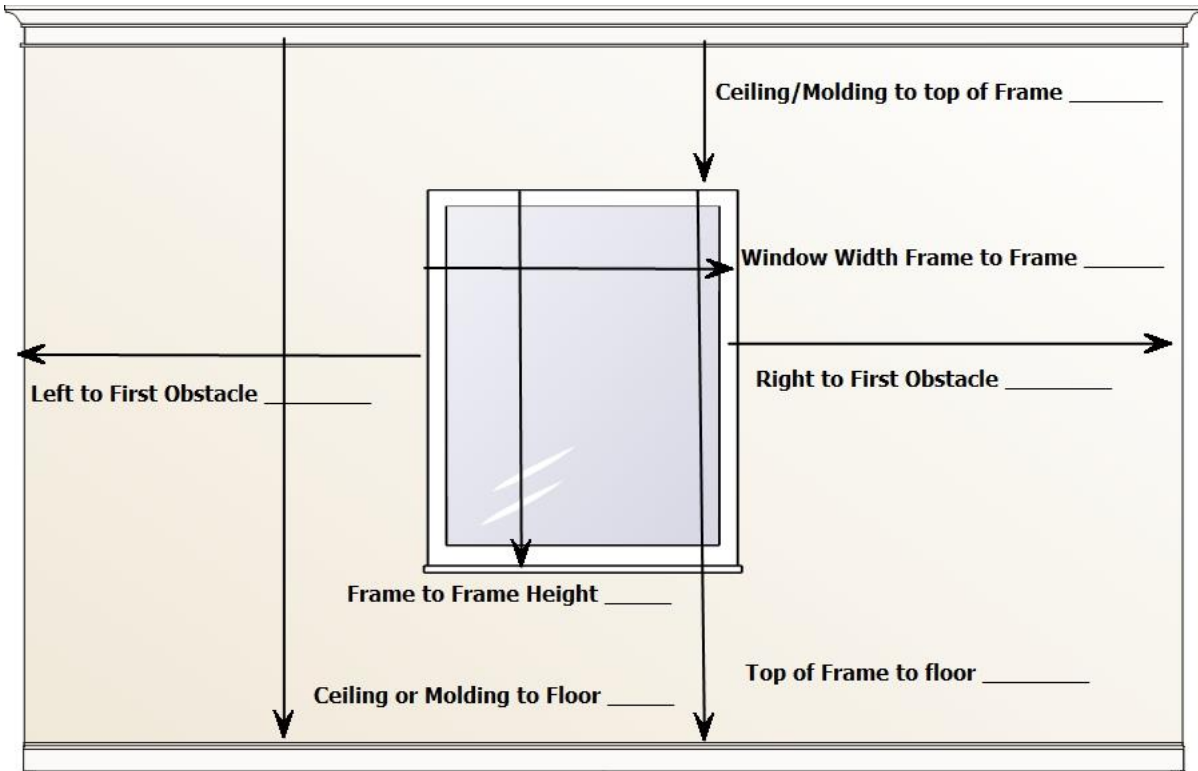

How to Measure a Window for Custom Draperies

Measure your window for the above measurements.



Consider the following options:

1. Clearing the window when open?

- a. 3 finger pinch pleat
- b. 2 Finger pinch Pleat

Frame to frame width x 1.333
 Frame to frame width x 1.25

Rod width

2. How high to mount the rod?

- a. Minimum Clearance for Pleats
- b. More Dramatic

Frame to Floor + 4"
 ½ distance to Ceiling to Floor

Rod Height

3. Panel Finished Length

- a. Standard
- b. Kiss the floor
- c. Puddling

- ½" from Rod Height
 No Deduction
 + 6-12" to Rod Height

Panel Height

WindowWears Inc

303-862-7606 www.windowwearsinc.com sue@windowwearsinc.com

1416 Park St

Castle Rock, CO 80109